


Oil Change Kit Instructions (YLU-4S10W-40-R1)

10W40 Semi-Synthetic

CHANGING THE ENGINE OIL

1. Start the engine, warm it up for several minutes, and then turn it off.
2. Place a container under the engine oil drain bolt.
3. Remove:
 - Lower cowlings (Where Required)
4. Remove:
 - Engine oil filler cap “1”
 - Engine oil drain bolt “2” (along with the gasket)

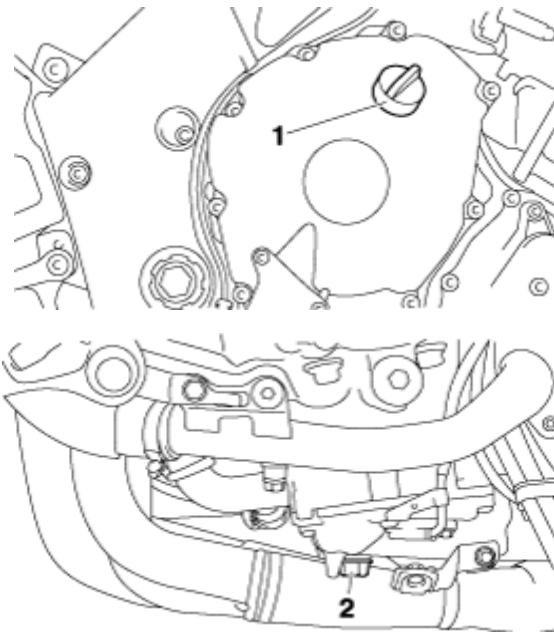


NOTICE:

- Engine oil also lubricates the clutch and the wrong oil types or additives could cause clutch slippage. Therefore, do not add any chemical additives or use engine oils with a grade of CD or higher and do not use oils labelled “ENERGY CONSERVING II”.
- Do not allow foreign materials to enter the crankcase.

5. Drain:


- Engine oil (completely from the crankcase)
6. If the oil filter cartridge is also to be replaced, perform the following procedure.
 - a. Remove the oil filter cartridge “1” with an oil filter wrench “2”.

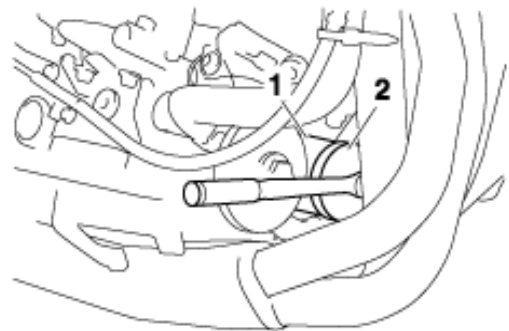


- b. Lubricate the O-ring “3” of the new oil filter cartridge with a thin coat of lithium-soap-based grease.

NOTICE:

- Make sure the O-ring “3” is positioned correctly in the groove of the oil filter cartridge.

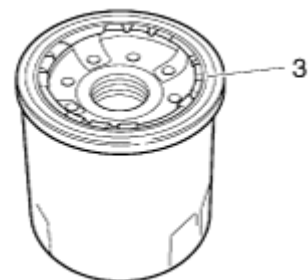

- c. Tighten the new oil filter cartridge to specification with an oil filter wrench.


	Oil filter cartridge
	17 Nm (1.7 m·kgf, 12 ft·lbf)

Oil Change Kit Instructions (YLU-4S10W-40-R1)

10W40 Semi-Synthetic

7. Install:

- Engine oil drain bolt
(along with the gasket)

	Engine oil drain bolt 43 Nm (4.3 m·kgf, 31 ft·lbf)
---	---

8. Fill:

- Crankcase
(with the specified amount of the recommended engine oil)

NOTICE:

- SEE TABLE FOR CORRECT OIL QUANTITY FOR YOUR MODEL.

9. Install:

- Engine oil filler cap

10. Start the engine, warm it up for several minutes, and then turn it off.

11. Check:

- Engine
(for engine oil leaks)

12. Install:

- Lower cowlings (If Required)

13. Check:

- Engine oil level

CHECKING THE ENGINE OIL LEVEL

1. Stand the vehicle on a level surface.


TIP


- Place the vehicle on a suitable stand
- Make sure the vehicle is upright

2. Start the engine, warm it up for several minutes, and then turn it off.

3. Check:

- Engine oil level
The engine oil level should be between the minimum level mark “a” and maximum level mark “b”.
Below the minimum level mark → Add the recommended engine oil to the proper level.


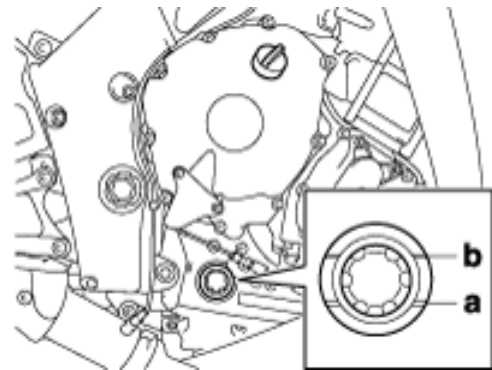


	Type SAE 10W-40, SAE 10W-50, SAE 15W-40, SAE 20W-40 or SAE 20W-50 (14B1, 14B2) YAMALUBE 4 10W-40 or YAMALUBE 4 20W-50, SAE 10W-40 or SAE 20W-50 (14B3) Recommended engine oil grade, API service SG type or higher, JASO standard MA
---	---

Oil Change Kit Instructions (YLU-4S10W-40-R1)

10W40 Semi-Synthetic

Viscosity Chart

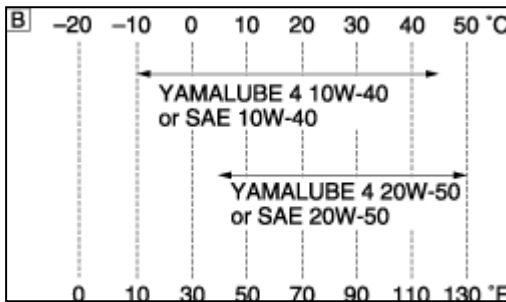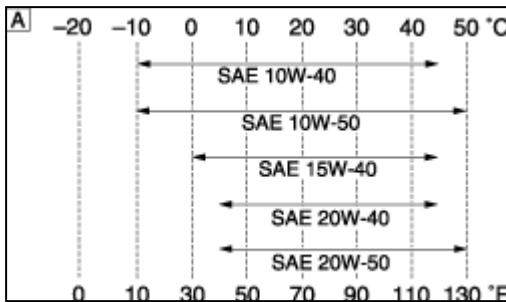

4. Start the engine, warm it up for several minutes, and then turn it off.

5. Check the engine oil level again.

TIP

- Before checking the engine oil level, Wait a few minutes until the oil has settled.

PLEASE NOTE:

- Always refer back to your owner's manual or discuss with your local Yamaha dealer.

Kit Contents

Part Number	Description
5GH-13440-50	Oil Filter
214-11198-01	Gasket
YMD-65021-04-03	Yamalube Y4-S 10W40 Semi Synthetic Oil 4 LT

Correct Oil Capacity for your Model.

Model	Year Model	Oil Only Change	Oil & Filter Change
YZF-R1	2007 - 2008	2.90 LT	3.10 LT
YZF-R1	2009 - 2014	3.73 LT	3.93 LT
YZF-R6	2006 - 2015	2.40 LT	2.60 LT
FZ1 S/N	2006 - 2014	2.90 LT	3.10 LT
FZ6 S/N	2007 - 2009	2.50 LT	2.80 LT
FZ6R (XJ6-FL)	2010 - 2015	2.50 LT	2.80 LT
FZ8 S/N	2011 - 2013	2.90 LT	3.10 LT
XJ6S	2009	2.50 LT	2.80 LT
XJ6-N	2010 - 2015	2.50 LT	2.80 LT
XVS1300A	2010 - 2015	3.20 LT	3.40 LT
XVS950A	2009 - 2015	3.70 LT	4 LT
XVS950CU (BOLT)	2014 - 2015	3.70 LT	4 LT
FJR1300/A	2001 - 2015	3.80 LT	4 LT
MT-09	2014 - 2015	2.40 LT	2.70 LT